

TRIMMER POTENTIOMETERS(VR) & SWITCH --可調電阻,開關



3296
(BOURNS)



3362
(BOURNS)



3323
(BOURNS)



TC33 (3D-SMD)
(BOURNS)



3314
(BOURNS)



GF063P1
(TOCOS)



C8-22-5 8D



C8-33-25 8D



C8-04-10 8D



16KPN 16D



162K-1 16D



09N



09NP



1001G



1001-N



10-6-10A



10-1-10 10D



10-1-5 10D



8-35-5R 8D



8-5-10 8D



8-510-10 8D



68-3-25R 6D



68-5-5 6D



6-5 50-5 6D



6-30-25R 6D



10-5-5 10D



3590S
BOURNS

Switch



6x6 DIP



 
6x6 -90度




6x6 SMD




12*12 DIP

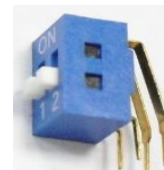

指撥開關 90度

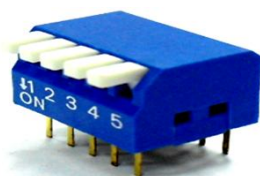 

Piano Switch

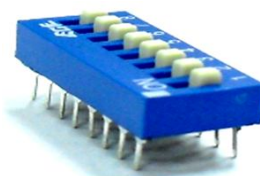 

Slide Switch(指撥開關)



TOGGLE